



THE SUPERTIDE OPERATIONS MANUAL

www.nixon.com

WELCOME.

Welcome to the wonderful world of Nixon Digital Tide! The watch you are holding in your hand gives you access to the Tidal Data for over 230 Beaches. The beaches are broken down into 14 different Zones that we have hand picked for you across the Globe.

IMPORTANT

Please refer to the watch case back for your watch's water resistancy rating, or our website: nixon.com

1 MODES

Press PUSHER C to advance through modes in the following sequence:

HOME SCREEN: TIME, TIDE, SUNRISE/ SUNSET, HEAT TIMER, ALARM

*In any mode Press PUSHER A to activate the light. except inTIDE mode press and hold PUSHER A to activate the light.

2 TIME MODE

In TIME MODE:

Press and hold PUSHER A to show the time application instructions.

Press and hold PUSHER B to move between Time 1 (T1)/ Beach 1 (B1) and Time 2 (T2)/ Beach 2 (B2).

That's right! You can set a different beach that corresponds to Time 2.

Press and hold PUSHER C to move into time and beach set state.

In TIME 1 AND BEACH 1 SET STATE:

Press PUSHER C to move through each setting (Hour, Minute, Year, Month, Date, 12hr/24hr, Daylight savings (DST) on/off, Hourly chime on/off, Zone, Beach).

TIME MODE CONTINUED

Press PUSHER A to activate the light and to increase the value of each setting.

Press PUSHER B to decrease the value of each setting. Press and hold PUSHER C to exit time mode set state.

To set T2 and B2 you must firstly be in T2 screen.

There are 14 Beach Zones as well as a 15th selection which is Basic Tide. This Tide Setting is there in case you can't find a Pre-Programmed location that works for you. Entering this Zone will require you to SET the next High Tide Time based on a Local Data reference such as a tide chart. Setting your watch to BASIC TIDE will follow the tidal computation of a 12 Hour 25 Minutes 14 Seconds difference from High Tide to High Tide. Low Tides are assumed to occur exactly in between High Tide Times.

3 TIDE MODE

The Hi and Lo tides will be displayed on the graph as well as 48hrs of future tide information.

The beach defaults to the current beach you have set in Time mode.

This beach name is displayed when you enter Tide mode. If Time 1 is active, the beach set for Tide 1 will be displayed.

If Time 2 is active, the beach set for Tide 2 will be displayed.

In TIDE MODE:

Press PUSHER A to scroll forward 24 hours of tide information up to 48 hours.

Press PUSHER B to scroll back 24 hours up to 24 hours of previous tide.

If no pushers are pressed wile in Tide mode for the duration of 45 seconds then the watch will return to Time mode.

In SUNRISE/SUNSET MODE:

The sunrise and sunset times are shown for the time setting indicated in the top right corner.

The sunrise and sunset times displayed are for the current beach setting of that time indicated.

There is no SUNRISE/SUNSET available for BASIC TIDE setting.

4 TIMER MODE

In TIMER MODE:

To reset the timer press and hold PUSHER B.

To set the TIMER press and hold PUSHER C to move into setting state.

In setting state press PUSHER A to increase the timer value in minutes and press PUSHER B to decrease the timer value in minutes.

Once the time is set press and hold PUSHER C to exit setting state and return to TIMER mode.

Press PUSHER B to start the timer.

Press PUSHER B again to stop the timer.

To reset the timer press and hold PUSHER B.

Press and hold PUSHER A to show the menu instructions at any time.

The maximum timer setting is 100 minutes.

5 ALARM MODE

In ALARM MODE:

To set the alarm time press and hold PUSHER C. In setting state Press PUSHER C to move from hour and minute.

In setting state use PUSHER A to increase the time value and PUSHER B to decrease the value.

Once the alarm time is set press and hold PUSHER C to return to alarm mode.

Press PUSHER B to turn the alarm ON or OFF.

You will see the icon in the top right corner if the alarm is ON.

Press and hold PUSHER A to show the menu instructions at any time.

The alarm is only active for the current time zone.

1 WATCH WILL SHIP IN SLEEP MODE. TO EXIT SLEEP MODE PRESS ANY PUSHER. THE WATCH CAN NOT THEN BE PUT BACK INTO SLEEP MODE.

NEVER PUSH A BUTTON OR SET THE WATCH WHEN IT IS SUBMERGED.

LOW BATTERY INDICATOR DISPLAY
Indicates that your battery level is low

CURRENT TIDE INDICATOR

ZERO BAR FOR TIDE HEIGHT

TIDE AND SUNRISE/ SUNSET GRAPH

SUNSET (BLACK IS NIGHT)

SUNRISE (WHITE IS DAY)

DAY OF WEEK/ MONTH/ DATE

TIME OF DAY

TIME 2 (T2) INDICATOR

AM/PM INDICATOR

PUSHER A
(APP MENU/ LIGHT/ SCROLL FORWARD/ [+])


PUSHER B
(START-STOP/ SCROLL BACK/ [-])

PUSHER C
(MODE/ SET)


2



3

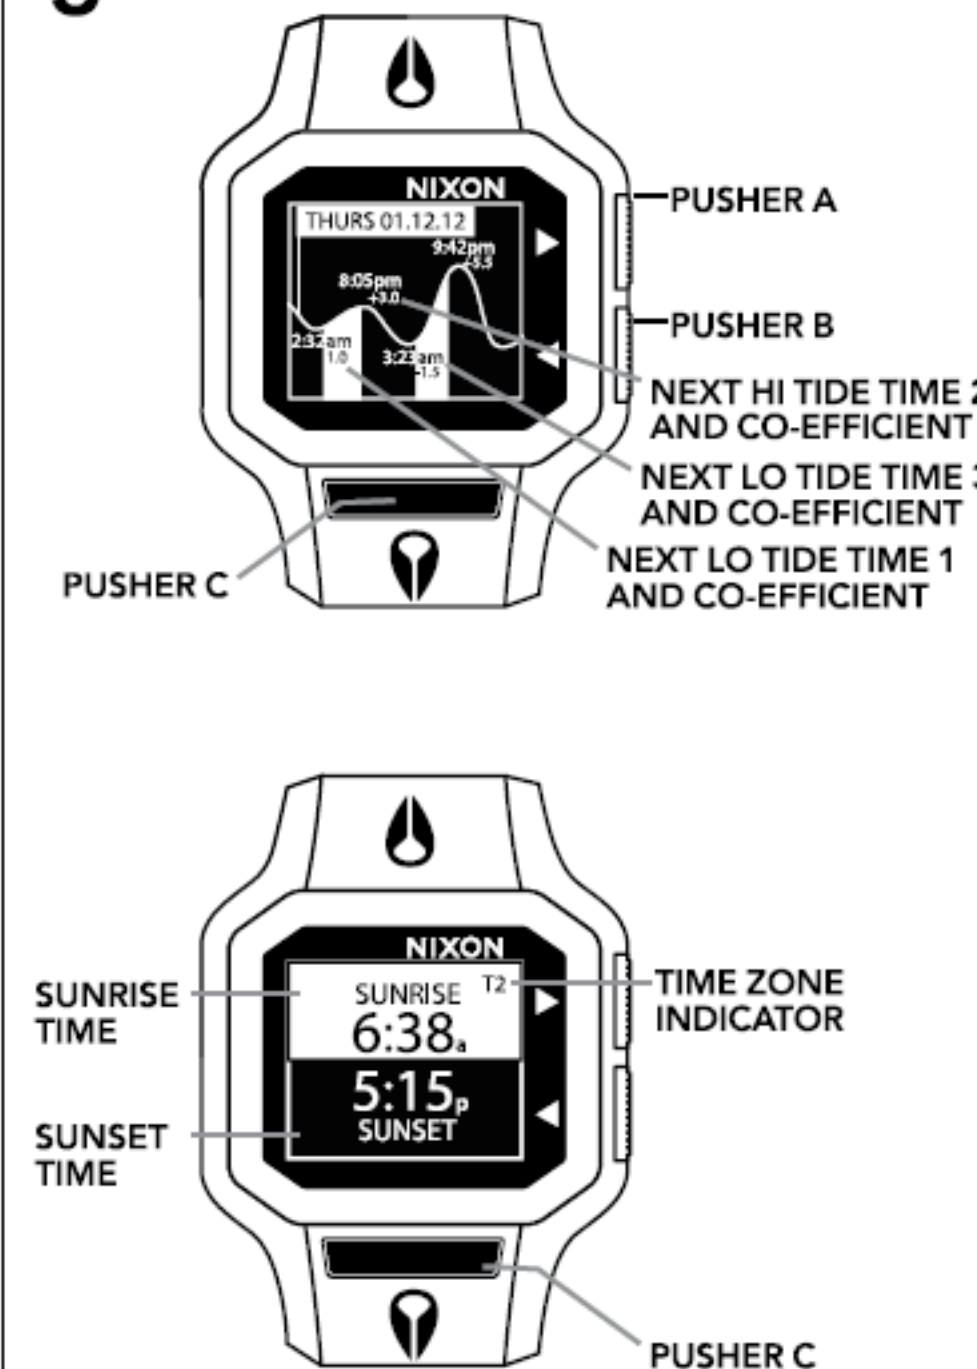

4

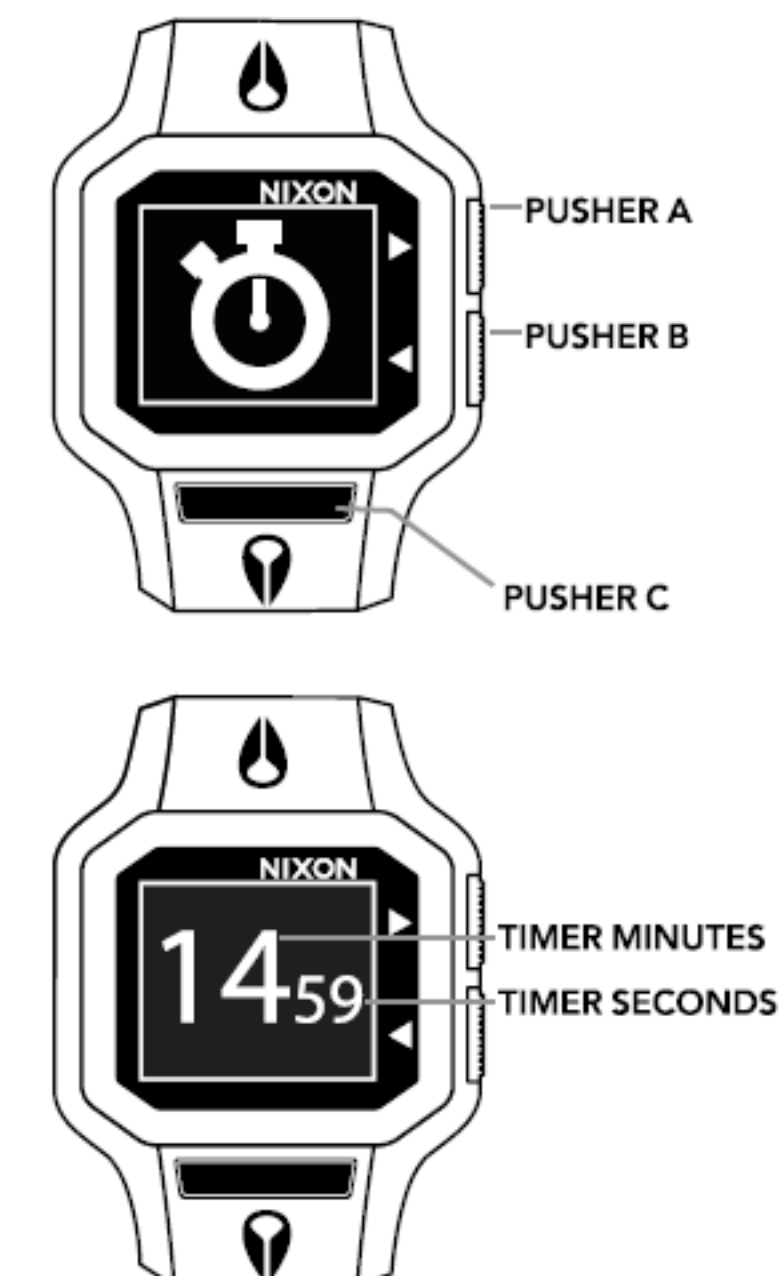

5

